



IP BOLD quick setup

Warning before starting to work with the unit. Please do not open the upper speaker grill to avoid losing the warranty.

Power supply: via PoE (according to IEEE802.3af) – point 8 below
 or via an optional, external power supply adapter 12VDC/1A (recommended) or 12VAC/1A – point 6 below

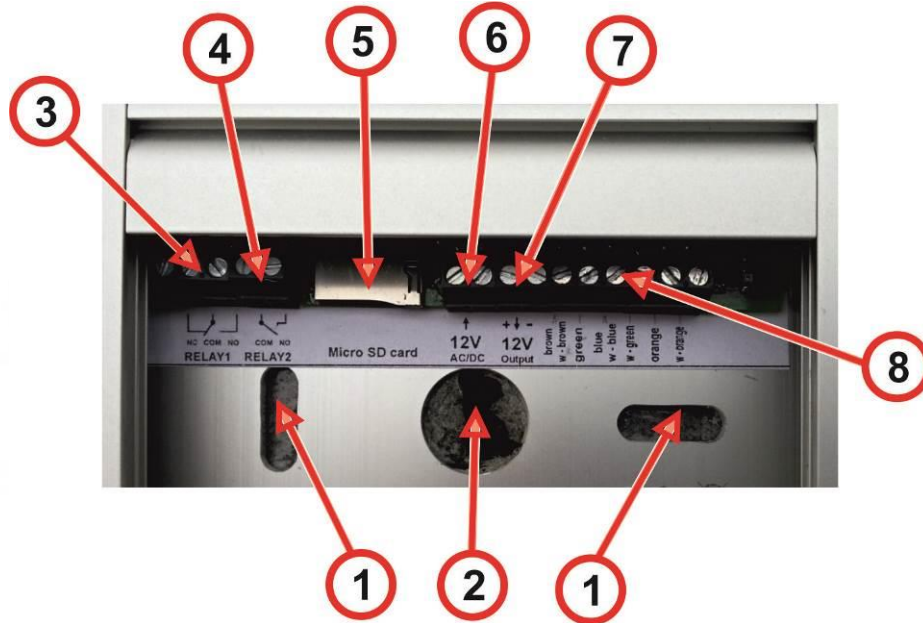

Ethernet UTP cable connection (point 8 above):

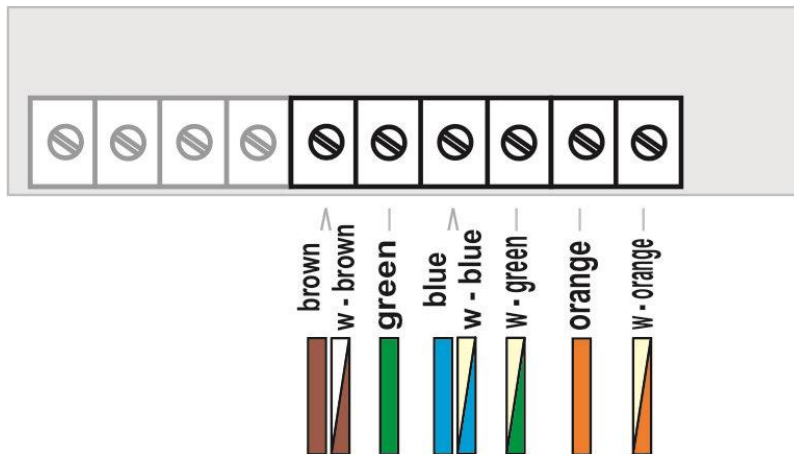

Default IP address: 192.168.1.250

User name: admin

Password: 1234

Latest firmware: <https://www.alphatechtechnologies.cz/en/firmware-ip-version-2>

