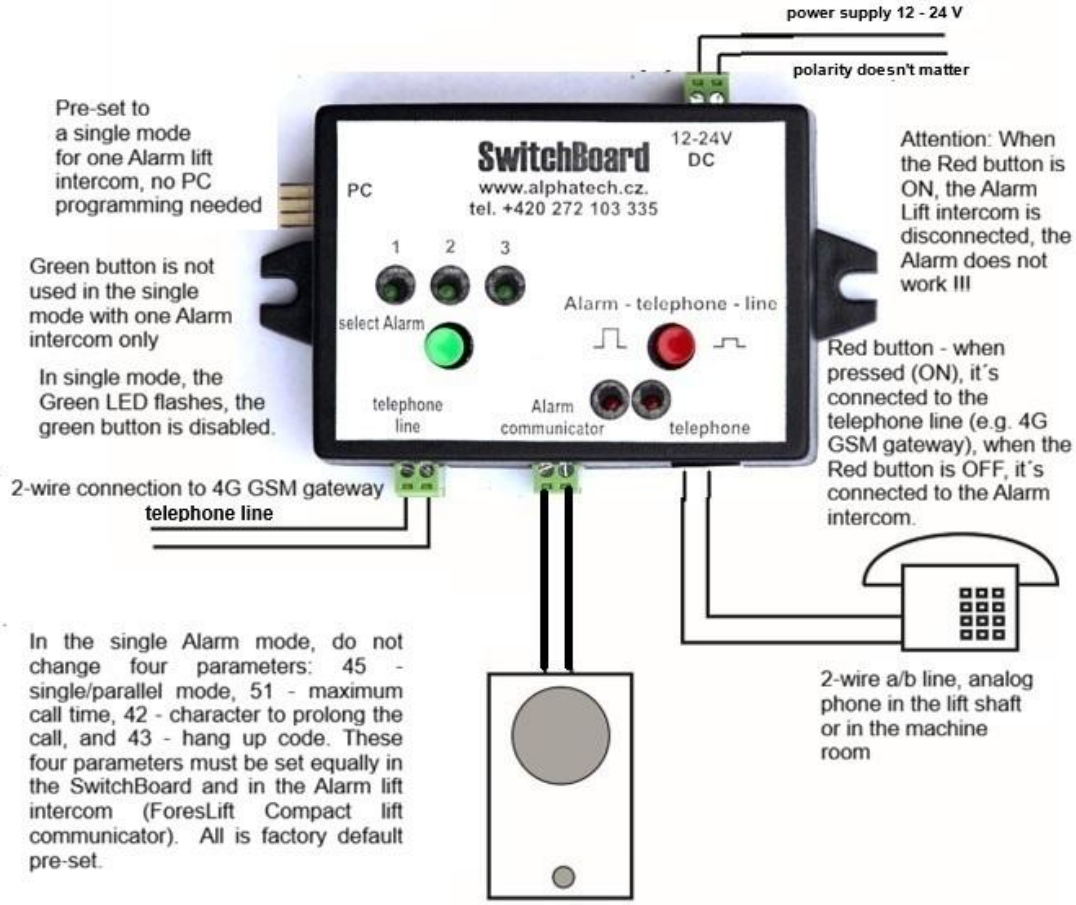

In the single Alarm mode, do not change four parameters: 45 - single/parallel mode, 51 - maximum call time, 42 - character to prolong the call, and 43 - hang up code. These four parameters must be set equally in the SwitchBoard and in the Alarm lift intercom (ForesLift Compact lift communicator). All is factory default pre-set.

2-wire analog Alarm Lift intercom

!!! Attention. When the RED button is in the "ON" position, the Alarm lift intercom does not work; it´s disconnected. The Alarm call is disabled. For normal operation and Alarm calls, the RED button must be in the "OFF" position. !!!